The Quintessential Quintuplets //

キャラクタッチ! Charactouch!

Character Chachi! - Five Equal Pieces of Hanaiichi

Instruction Manual ver.1.0

©Negi Haruba, Kodansha / "The Quintessential Quintuplets" Production Committee ©Negi Haruba, Kodansha / "The Quintessential Quintuplets" Movie Production Committee
©BANDAI

•Please note that the images in the instruction manual may differ slightly from the actual product.
•Image is for illustrative purposes only.

This product uses lithium-ion polymer (rechargeable). Please follow the rules of your local government and close your business before using the Character Match! unit.

Li-ion

USB rechargeable

*A USB port on a computer or other device is required for charging.

▲Caution "Please read this to all customers.

•This product is intended for use by people aged 15 and over. Do not give this product to children under the recommended age. •Please read the online instruction manual carefully. •This product contains electronic components. This product uses magnets, so if you are using a pacemaker, please be careful not to bring this product close to your body. (The built-in rechargeable battery may overheat, catch fire, or leak if used improperly. Please be careful of the following:) •Short circuiting can cause a large current to flow, which is dangerous. Do not do this at all. •Never recharge a charged CharaTach!. This can be dangerous as it can overcharge. •Stop using it immediately if it gets wet. This can cause a short circuit. •Never place it in water or fire, disassemble, or solder it. •Do not use, charge, or store it near fire or in high temperature or humid places. •When disposing of the product, follow the instructions for disposal by your local government. •Charge the product within sight and in a place where there are no flammable objects around. •Before charging, make sure there are no abnormalities with the main unit or charging cable, and discontinue use if any damage is found. •Check the "battery icon" in the upper right corner of the home screen to check the charging status. If the charging indicator does not appear even after starting charging, or if the charging completion indicator does not appear for more than two hours, remove the charging cable and immediately stop using the product. •After charging is complete, be sure to disconnect the charging cable from the device. •Do not wrap the cable around your fingers or other parts of your body, as this can cut off blood flow and is dangerous.

<Precautions for Use>•This product is made of precision electronic components. Do not drop it, get it wet, or disassemble it. Also, avoid using or storing it in places with high or low temperatures. •This product is precision manufactured. Applying excessive force or dropping it may cause damage. •This product has specially printed areas, so when storing it, avoid contact with other items (resin products, furniture, sofas). Colors may transfer. •If you rub it hard, the printed areas may become scratched or peeled off. Please handle with care. •Do not pull or bend the mounting parts in an unreasonable direction. •Please note that some of the pronunciations may have different intonations or may be difficult to hear due to the characteristics of the product. •Discard the plastic packaging material immediately after opening.

What is Character Touch!

Wear it as a badge and touch or talk to it.
This is a simulation toy that allows you to communicate with characters.

Through various communications and events, you can deepen your bonds with the quintuplets in preparation for the date event on the seventh day.

Table of contents

■How to turn on the unit
② Clock settings
3 Character selection
4 tutorial
5 Various menus
• Various event icons
7 Touch communication
• Pois Communication
9 item communication
10 SHOP
11 Status/Income/Memories 14
12 badge custom
13 System settings
TIPS
15 Operation confirmed
USB charging adapter

Set contents

Character Chachi! Main unit ------ 1 piece
1 charging cable ----------

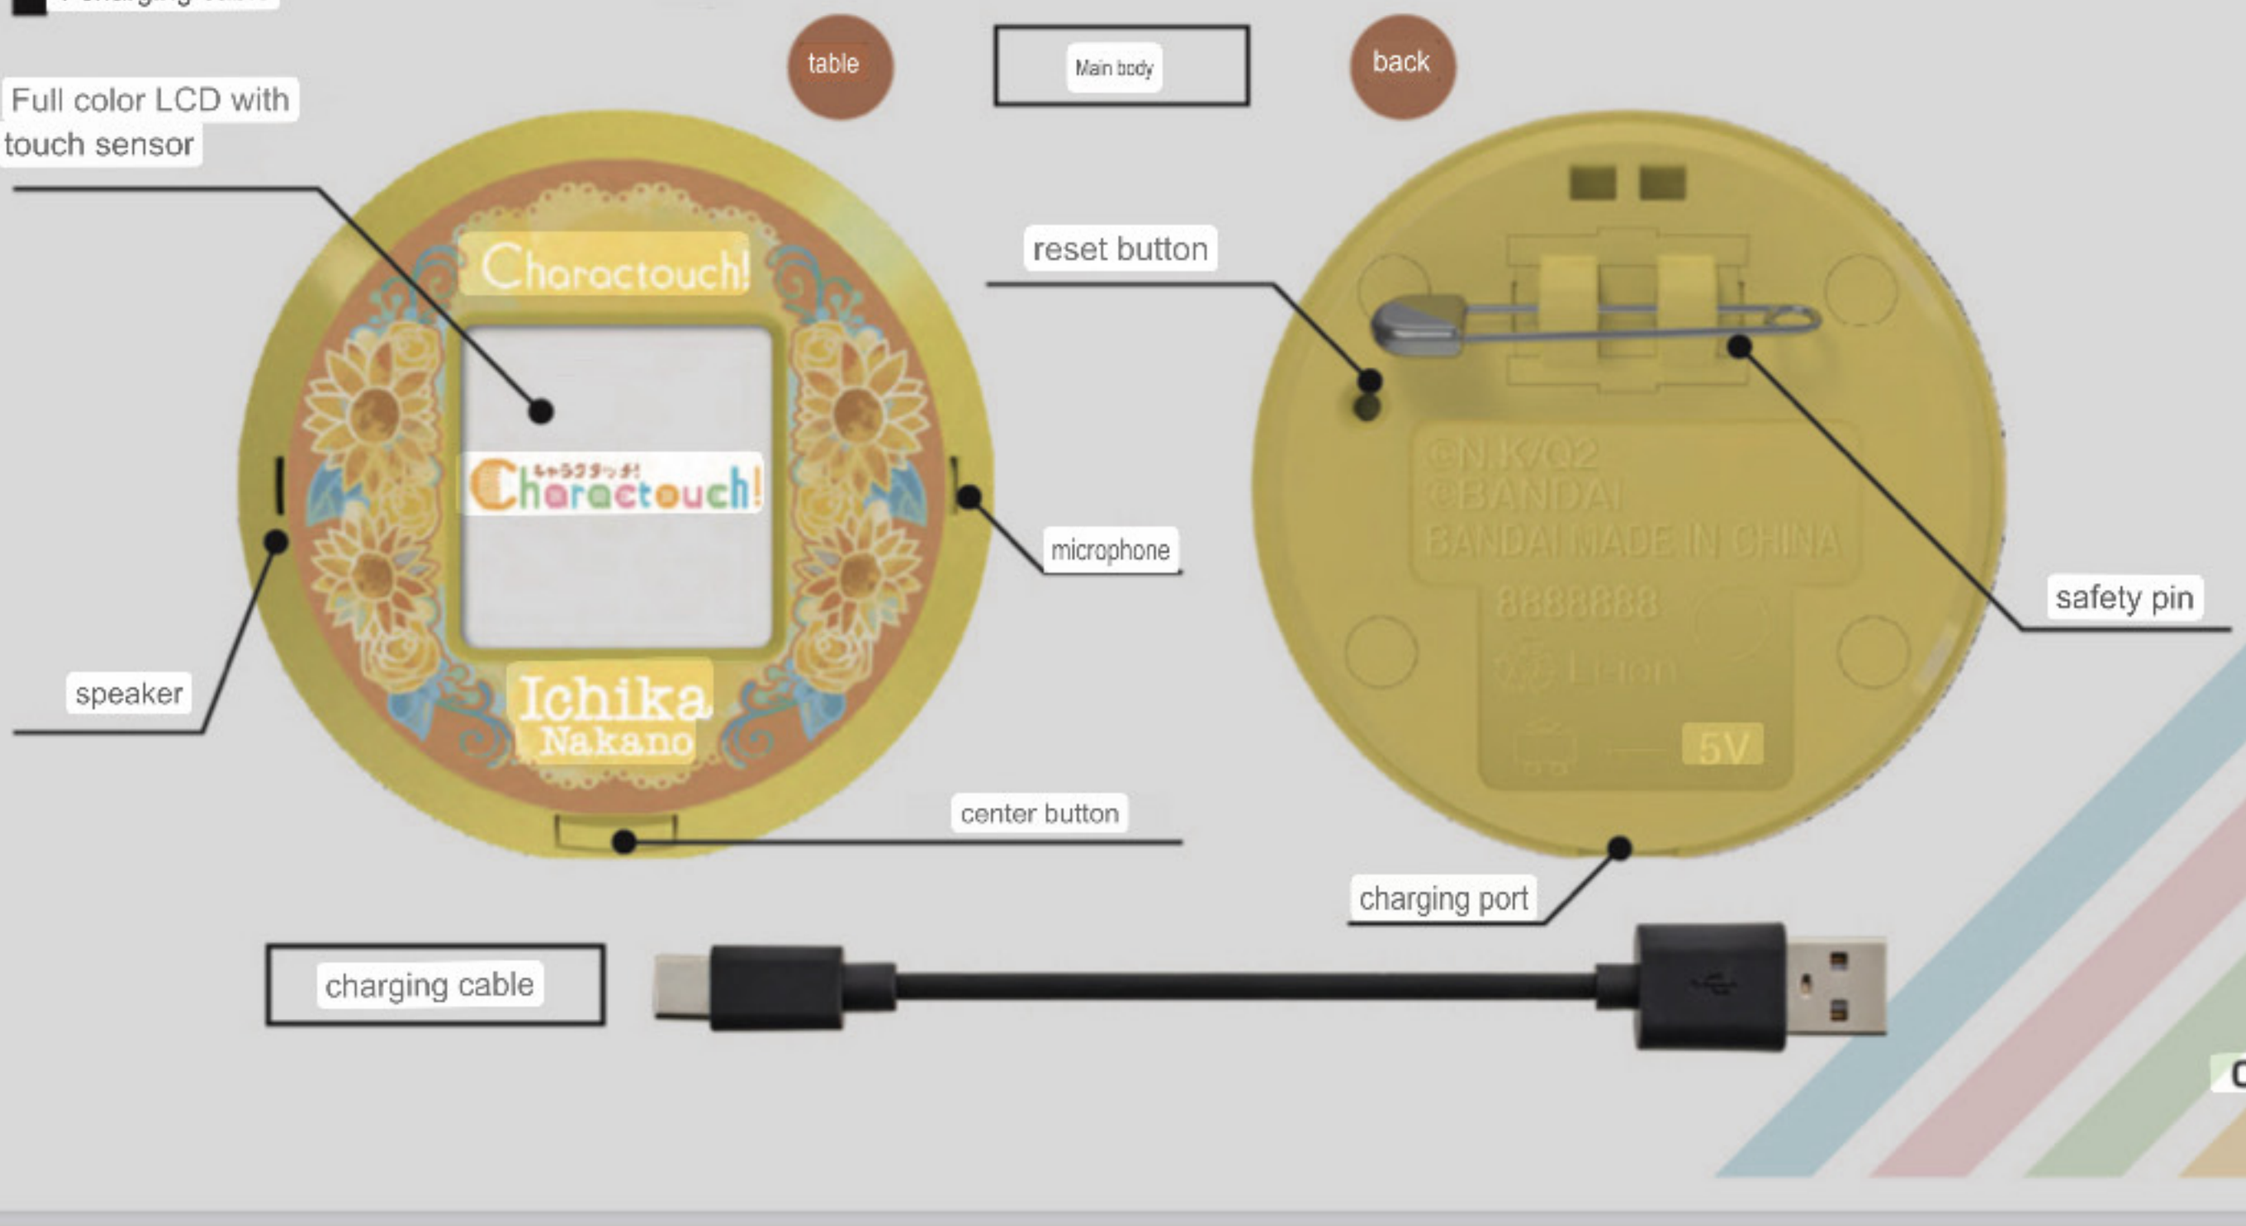

■Character selection

① After setting the clock, the character selection screen will be displayed. ② Touch ◀▶ to select the character you want to play. ③ Press any area other than 4/ or the center button to confirm.

*You can change characters again after the date event.

○ Tutorial

① After selecting a character, a tutorial on how to play will begin. ② You can advance the conversation by touching the touch screen. ③ Follow the instructions in the tutorial.

○ Various menus

Communication menu

Touch the touch screen on the home screen to display the communication menu. *If an event or call icon is occurring, the event will take priority.

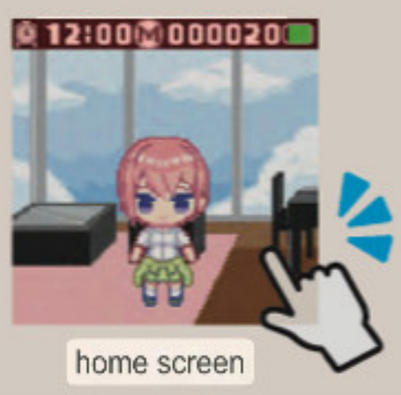

home screen

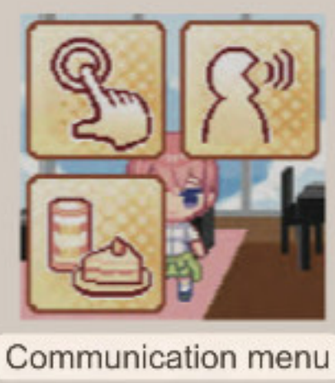

Communication menu

Settings menu

Press the centre button on the home screen to display the settings menu.

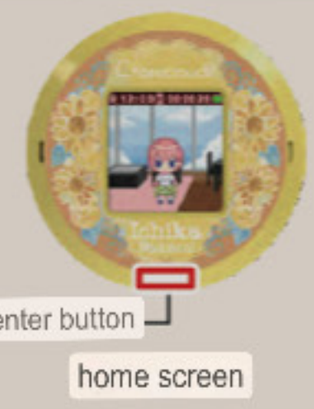

home screen

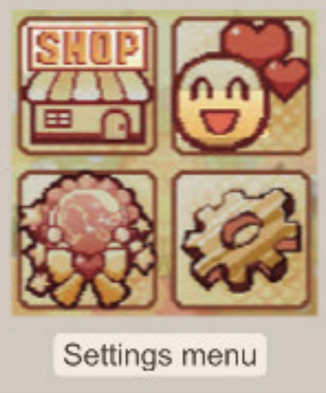

Settings menu

○ Various event icons

call icon

① An icon will appear when certain conditions are met. ② A character will talk to you when you touch it.

*Depending on your playing situation, the same event may occur multiple times.

event icon

①The icon will appear when certain conditions are met. ② Touch the character to talk to him.

※Depending on the gameplay, the same event may occur repeatedly.

fuchou icon

①The icon will appear when certain conditions are met. ② It can be released by using a specific item.

※Depending on your playing situation, the sick icon may be displayed repeatedly.

□ Touch communication

Through touch communication, you can enjoy communicating with characters and your "mood" may increase.

① Touch the Touch Communication icon in the top left of the communication menu.

② You can communicate by touching or by touching and sliding left or right.

○Voice communication

With voice communication, you can enjoy communicating with characters and your "mood" may increase.

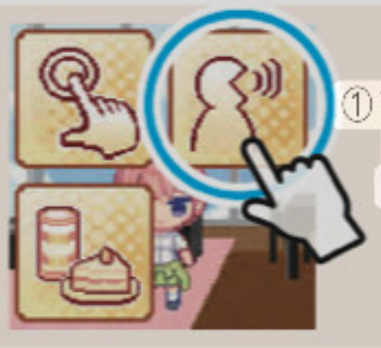

① Touch the voice communication icon in the top right corner of the communication menu.

②You can communicate with the voice by speaking into the microphone on the right side of the unit.

*If the microphone icon on the bottom left does not respond, try moving the device closer.

Basic operations

*When operating the touch screen, please operate gently and slowly without pressing too hard.

Selection/Decision

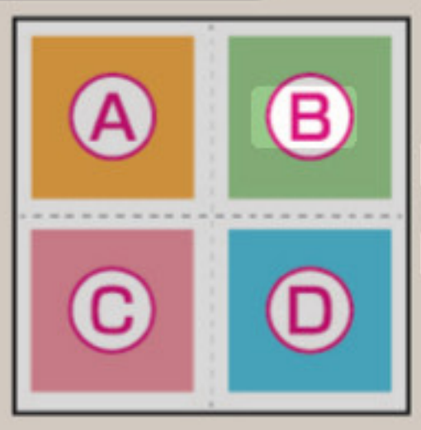

The CharaTatch! main unit's screen is divided into four sensor areas.

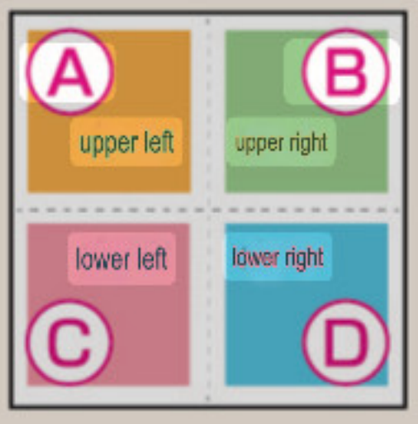

If the screen looks like the one on the left
If you want to select the option in the top left, touch the Ⓐ area; if you want to select the option in the top right, touch the area; if you want to select the option in the bottom left, touch the ◎ area; if you want to select the option in the bottom right, touch the ◎ area.

Switching screens

When there is a triangle mark on the screen as shown below, you can move your finger in the direction of the red arrow to switch pages.

When viewing the right page (left slide)

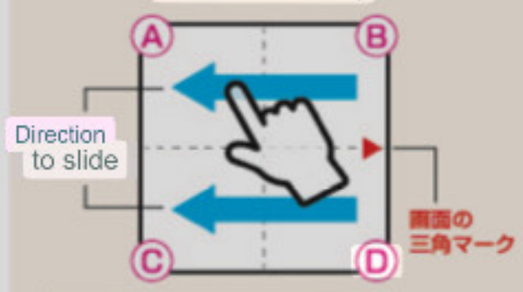

To view the page on the left, move your finger from ⑧ or ◎.

When viewing the left page <Slide right)

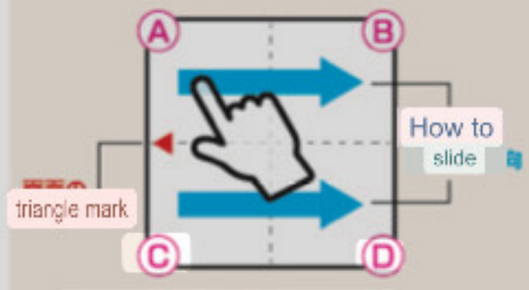

To look at the page on the left, move your finger from Ⓐ or from ◎ to ◎.

Cancel/Go back

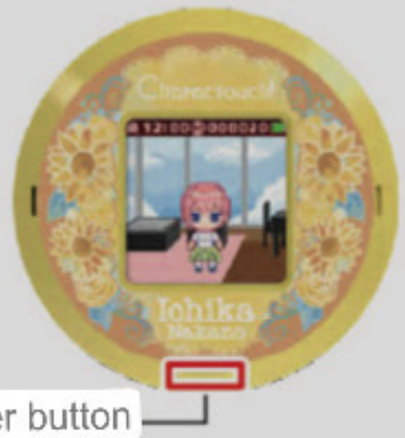

center button

Press the centre button to return to the previous page.

■How to turn on the device

CharaTatch! Press the center button on the bottom of the unit.

Press and hold the center button until the power turns on.

*If the power does not turn on even after pressing the center button for 10 seconds or more, please charge the device.

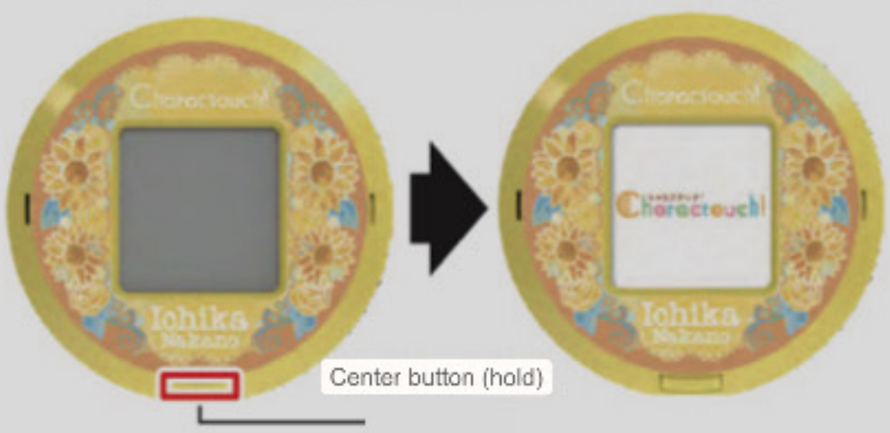

Please charge the battery before use.
When charging, be sure to use the included charging cable.
"If this happens... if the power won't turn on, it may be because the battery is not charged.

How to charge the main unit

① If the battery level of the main unit is low, please charge it.
Please also charge the battery if the low voltage screen (screen below) is displayed.

Battery level

low voltage screen

② Connect to the charging port at the bottom of the unit.
Insert the micro USB end of the USB charging cable.

3) Connect the other end to the USB port on your computer.

※PC USB port or bottom of the manual
Do not charge using a USB adapter other than one that has been confirmed to work.
Doing so may result in smoke or fire.

Once charging is complete, immediately remove the charging cable.

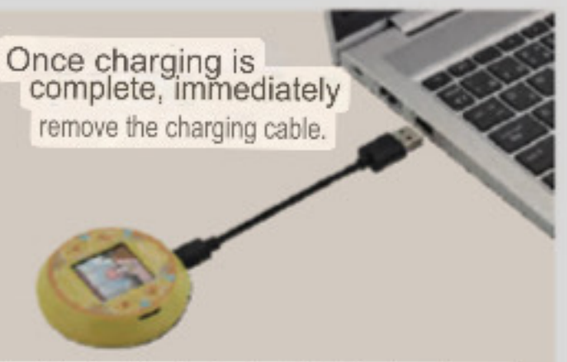

*Even if you start charging, the charging indicator does not appear.
If it does not charge for more than 4 hours,
Immediately remove the charging cable
Please stop using it.

• Clock settings

①You can change the time by touching the ◀ ▶ on the touch screen.

② Press the center button to set the hour/minute.

*The date inside the unit will change from 23:59 to 00:00.
*Clock accuracy is within ±10 seconds per day.
*After the initial setup, you can change the clock from the settings menu.
*When operating the touch screen, please operate gently and slowly without pressing too hard.

○ Item communication

In Item Communication, you can use items to restore a character's "mood" or "mentality," or to trigger certain events.

1. Touch the Item Communication icon at the bottom left of the communication menu.

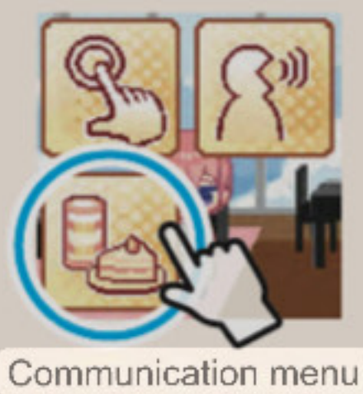

Communication menu

② A list of your owned items will be displayed. Touch and then slide left or right without releasing your finger to go to the next page.

Item list

③Touch the item image to see the item's description.

Item selection

④ Touch "Use" to use the item.

Item description

10 SHOP

In the SHOP, you can purchase items using the miles you have accumulated in badge mode.

①Touch the SHOP icon in the top left of the settings menu.

Settings menu

② A list of items for sale will be displayed. Touch and hold your finger and slide left or right to go to the next page.

Item list

Touch the item you want to purchase.

Item selection

(4) Touch the image of the item to view its description. ⑤ Touch "Buy" to use your miles to purchase the item.

Item description

□ Status/Income/Memories

You can check the status of your character in the status bar.

①Touch the status icon in the top right corner of the settings menu.

Settings menu

② You can check the number of days until the date event, your mood, and energy.

③ You can change into the costume you have acquired by clicking the icon on the bottom left.

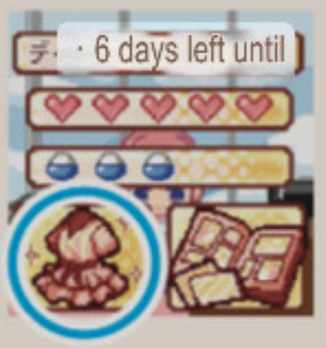

Isho

④You can check out your memories of the event from the album in the bottom right.

Remember

Good luck

This number represents the character's mood. If it is high, the amount of miles earned will increase, and if it is low, the amount of miles earned will decrease. It can be recovered or decreased through touch communication, voice communication, items, events, etc.

Tairiyoku

This is the character's strength. It will decrease if you continue in Badge Mode. It can be restored with certain items, but if it remains at zero for a long time, it will become "Incompetent."

□ Badge custom

Badge Custom allows you to change the image displayed in Badge mode.

①Touch the status icon at the bottom left of the settings menu.

② Select the character you want to change. ③ Select the image you want to set and confirm.

* The image to be set can be obtained at certain events. * Badge mode can be ended by pressing the center button.

System settings

In the system settings you can change the volume/brightness/clock settings and reset the data.

Settings menu

①Touch the system settings icon in the bottom right.

Volume settings/Brightness settings/Clock settings/Data reset

Top left: Volume setting
Top right: Brightness settings
Bottom left: Clock settings
Bottom right: Data reset

*Data cannot be recovered after it has been reset.

14 TIPS

intimacy

There is an "intimacy" status that changes with the progress of each communication and event. When "intimacy" changes, changes appear in the graphics and voice.
Furthermore, this "intimacy" has a large impact on date events.

event

Each event can be triggered by a change in status or a specific item.

badge mode

Press and hold the center button to enter Badge Mode. In Badge Mode, you can earn miles by walking around with the device on. The amount of miles earned varies depending on the character's status.

*When in badge mode, please use the device in portrait orientation, not horizontal orientation. (The acceleration sensor may not be able to count.)

Sleep mode

If you leave the device idle for a period of time in any mode other than badge mode, it will enter sleep mode, which can be woken up by pressing the center button.

Character change/Items owned

When you change characters, the items you own will be reset, but the costume/badge image will be carried over. *You can change characters after the date event ends.

charging

Maybe something good will happen if you charge it.

15 Operation confirmed USB charging adapter

Regarding the USB charging adapters that have been confirmed to work when charging the "Charatch! The Quintessential Quintuplets" main unit using a USB port other than a computer's USB port, the USB charging adapters that Bandai has confirmed to work and charge are as follows. (As of January 2024)

Anchor Japan Co., Ltd.

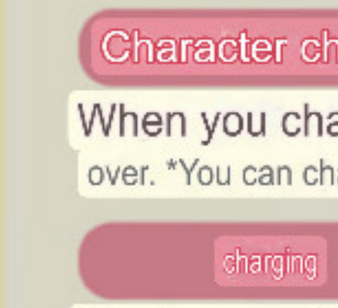

Anker PowerPort mini

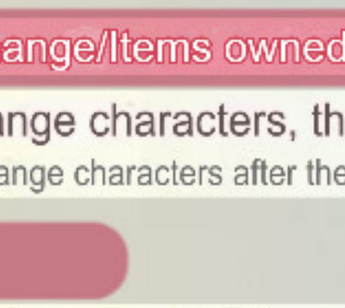

Anker PowerPort 2 Elite

Sanwa Supply Co., Ltd.

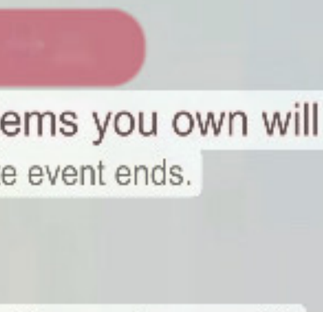

ACA-IP49BKN

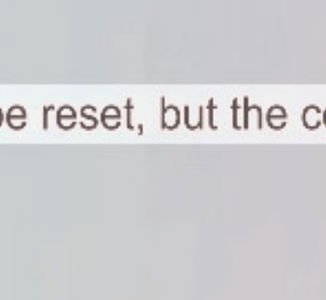

ACA-IP70BK
ACA-IP70W

ELECOM Co., Ltd.

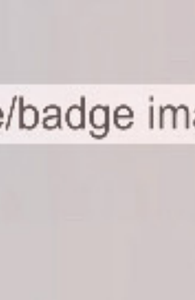

AVA-ACUAN007

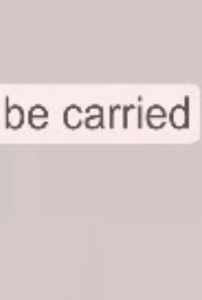

MPA-ACU07

*When charging, be sure to use the "charging cable" that comes with the device. *For information on the availability of USB charging adapters from each manufacturer, please check with the respective manufacturer or at the store.
* Although we have confirmed the compatibility with the above devices, please note that we do not guarantee the compatibility. * Please be sure to check the instruction manual of the above devices before using. Please use it correctly.
*This is only our own confirmation of operation, so please refrain from contacting each manufacturer regarding "Charactatch! The Quintessential Quintuplets".
*The information in this instruction manual is current as of January 2024.